




PRO-LINE 2500 MODEL

ALUMINUM, PILLAR MOUNT

GATE MOUNTING BRACKET ASSEMBLY


1A.

Front View

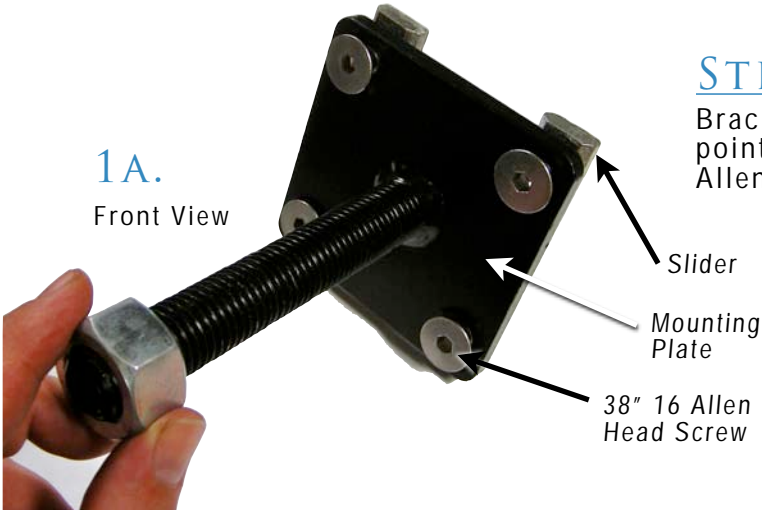

STEP 1:

Attach Sliders to the back side of the Bracket's Mounting Plate (with the flat side of the slider pointing away from the bracket) using the provided 3/8" 16 Allen Head Screws.

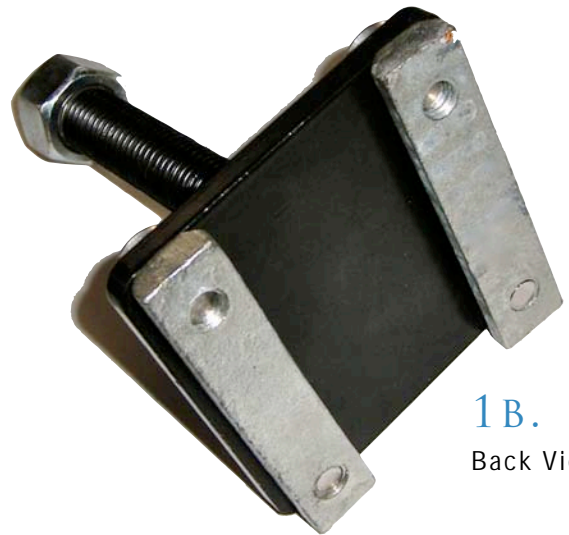


1B.

Back View

STEP 2:

Insert the sliders into the dovetail grooves in the Pro-Line 2500 Extrusion.

2.

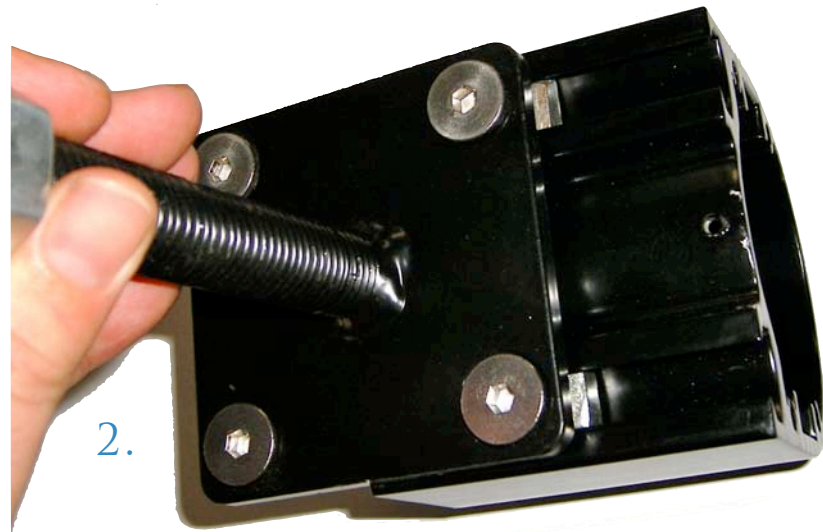

STEP 3:

Position the bracket to the desired placement on the Pro-Line 2500 Operator and secure in place by tightening the screws using a 7/32 Allen wrench.

3.

