


SOLAR PANEL BRACKET ASSEMBLY

& WIRING



1.

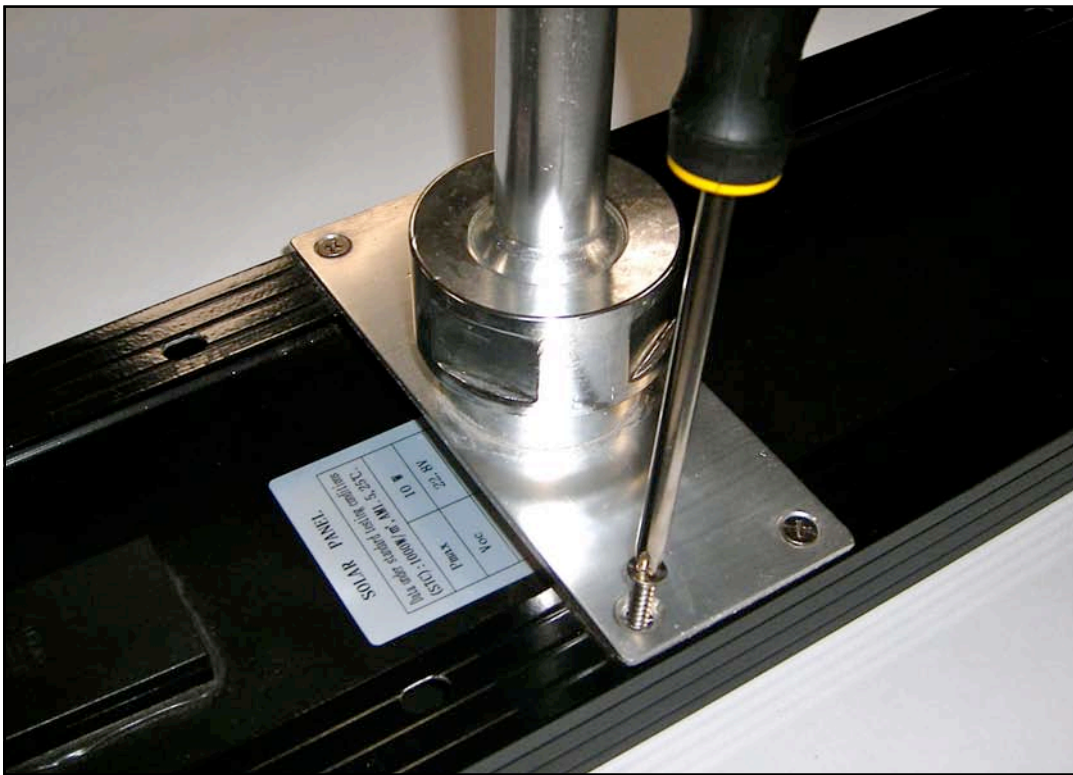


STEP 1:

Using a Phillips Head screwdriver, attach Solar Panel Bracket to the back of your solar panel with the included 4 screws. Be sure to pre-drill holes. Bracket may be mounted to the back of the solar panel in any desired location. See figure 1.

**Note: The four pre-existing holes on back of panel are for mounting the panel without the adjustable bracket.*

STEP 2:

Wire your Solar Panel to the wiring terminal on your Turnstyle™ Control Board labeled "Solar/AC". **Your Solar Panel is Polarity Sensitive**, so be sure the positive terminal on your solar panel is connected to the left side of the "Solar/AC" terminal on your control board, and likewise the negative terminal on your solar panel is connected to the right side of the "Solar/AC" terminal on your control board. See figure 2.

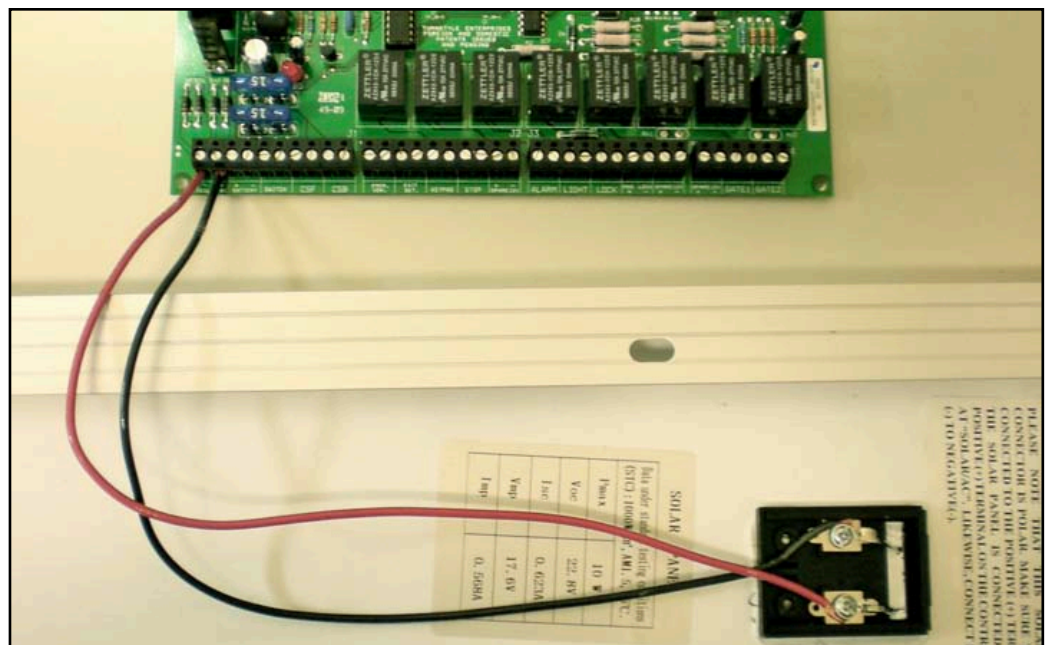

2.